


TOP VIEW

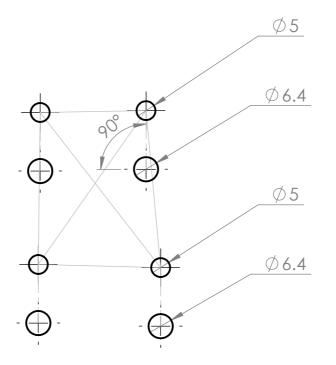

RIGHT FOOT

TOP VIEW

BAT Logic ShoePlate PRO 2.0 fixings							
1	Fasten - down threaded boss						
2	Shoe attachment hole						

Notes:

- The upper holes ((1) \emptyset 5mm) are where the ShoePlate PRO is attached to a foot stretcher
- * (1) are the only points used to attach the ShoePlate PRO assembly onto a footstretcher incl. shoes.
- The lower holes ((2) ϕ 6.4mm) are where the Nike Omada shoe attaches to the ShoePlate PRO.
- * (2) indicates the position of a shoe in respect to the attachment of the ShoePlate PRO to a foot stretcher. These attachment points are optimized to work best with Nike Omada.

The following drawings do not indicate or dictate splay or width, nor does it allow for fitting specifications within any one hull. These drawings are to be used with the accompanied DWG engineering file for use in detailing hole locations on a footstretcher.

Ensure to constrain relations between fastening points and rotate about the center point indicated for splay as each foot stretcher is individual.

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: Specified TOLERANCES: +/- 0.2mm				E.			QTY:	DO NOT	SCALE DRAWING REVISION: 1 TY. LTD.			
	NAME	SIGN	ATURE	DATE				TITLE:				
DRAWN	James Kennedy		JK	18-01-11				9	PP20 attachment points			
CHK'D	Viktor Legin	Р	M	18-01-11				31 1 20 dilacilitietti politis				
APPV'D	James Kennedy		JK	18-01-11								
MFG	James Kennedy		JK	18-01-11								
Q.A	James Kennedy		JK	18-01-11	MATERIAL	:			DWG NO.			A3
												AS
					DATE: 18-01-12			SCALE:1:1		SHEET 1 OF 1		